iFIBER Communications Remote Button Guide

Device Keys – Used to select which device the remote will control. Note: To control the set top box the "STB" button [–] must be selected.	AUD DVD AUX	
RCU SETUP – Used to program the remote to control other devices.	CU SETUS	Master Power – Turns the selected device on and off.
DVR List – Takes you directly to your list of recorded programs.	DVR	 View Live TV – Takes you to "live" TV if you have used the pause or rewind keys.
Skip Back Arrow – Jump back 15 seconds.		 Skip Forward Arrow – Jump forward 30 seconds. Note: This feature will not work if you are watching "live" TV.
Rewind – Rewind 2x, 15x, 50x – and 300x real time.		 Fast Forward – Fast forward 2x, 15x, 50x and 300x real time.
Stop – One press will stop Rewinding – or Fast Forwarding; a second press takes you to "live" TV. While watching PVR/DVR content Stop will take you	MENU	 Play – Overrides Rewind, Fast Forward and Pause to play Video.
directly to "live" TV.		- Pause – Pauses Video.
Menu – Takes you into the user interface menu. Guide – Takes you into the channel guide.		 Info – While watching TV or PVR/DVR one press displays basic program information a second press displays more detailed information and a third press removes the information screen.
While in the channel guide the guide key is used to change which channels are available to view including any favorites lists that have been created.		 Arrow Keys – Allow you to navigate up and down, right and left in the user interface.
	+ DAY DAY	 OK – Selects highlighted option in the user interface.
Colored Keys – Execute specified command when prompted.		 Exit – Takes you directly to full screen video from anywhere in the user interface.
		 PG +/- – Ascends or descends entire page when in the guide.
- VOL +/- – Increases or decreases volume.	+ +	- Day +/ This feature is not currently available.
- VOD – Takes you directly to the VOD (Video On Demand) selections.	VOL CH	 CH +/- – Increases or decreases the channel number that you are watching. It can also be used to navigate up and down through the channels in the user guide.
Note: This feature is currently not available.	MY MEDIA MUTE NETWORK LAST	- Network – This feature is currently not available.
Mute – This will mute the audio.		- Last – Takes you back to the previous channel.
	1 2 abc 3 def	
Number Keys – Used to manually enter – desired channel numbers or passwords.	4ghi 5 jki 6 mno	
	7 pqrs 8 tuv 9 wxyz * DEL 0 #	
PIP, SWAP, MOVE, PHONE, WWW, SAP Note: These features are currently not available.	PIP SWAP MOVE CC	 CC – Activates closed captioning when available.
 INPUT – changes the desired input into your television. Note: the remote must be programmed to your television for this 	INPUT PHONE WWW SAP	
feature to work.	ADB	